



R50L Thin Client Bracket Set-up Guide –997-5798-00

www.planar.com

Planar Systems, Inc.

Customer Service

24x7 Online Technical Support: <http://www.planar.com/support>

1195 NW Compton Drive
Beaverton, OR 97006-1992

Tel: 1-866-PLANAR1 (866-752-6271) or +1 503-748-5799 outside the United States.

Hours: 24 hours a day, 7 days a week

© 2009 **Planar Systems, Inc. 3/09** Planar is a registered trademark of Planar Systems, Inc.

Other brands and names are the property of their respective owners.

Technical information in this document is subject to change without notice.

020-0985-00A

Items Included in Box	Items Needed
<ol style="list-style-type: none"> 1. R50L Thin Client Bracket – black. <ol style="list-style-type: none"> a. Please note: The side without the vertical ventilation lines lays flush to the back of the monitor. 2. Four 10mm Allen head screws – black – to attach the bracket to the back of the monitor – PT1510MX, PT1501MU, PT1710MX, PT1701MU, PT191MU models only. 3. Four 14mm Allen head screws – black to attach the bracket to the back of the monitor – PT1500MX, PT1550MX, PT1501MX, PT1505MU, PT1700MX, PT1701MX, PT1705MU, PT1910MX, PT1911MX, PT1915MU models only. 4. One 18" VGA cable to attach the thin client to the monitor 5. One 18" USB cable to attach the thin client to the USB touchscreen monitor 6. One DVI male to SVGA HD15 female video adapter to convert the DVI-I connector on the R50L to VGA on the monitor. 7. One 3mm Allen wrench to attach bracket to back of monitor. <ol style="list-style-type: none"> a. Please note: hardware to mount the bracket to the cart, swing arm or wall mount is not included. 	<ol style="list-style-type: none"> 1. PT touchscreen LCD monitor with a USB connection and either a 75 or 100 mm VESA hole pattern on the back. <ol style="list-style-type: none"> a. Note: May also be used with the serial versions of the PT touchscreen LCD monitors but the short RS-232 serial cable will need to be sourced separately as it is not included. b. Note: The brackets may be used with the open-frame kiosk displays. 2. Wyse® R50L thin client (sold separately).

Attachment Process



Figure 1: R50L Bracket


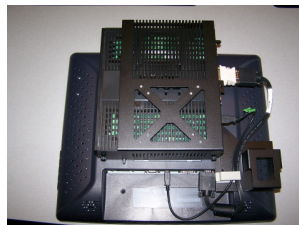


Figure 2: Fully integrated unit

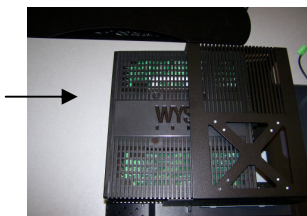

Figures 3 and 4: Slide thin client from left to right. Attach thin client to bracket using the two screws included with the thin client.

1. Remove bracket, screws, and thin client (sold separately) from their packaging materials.
2. If necessary, remove deskstand from PT monitor. Instructions found in monitor user's guide.
3. Orient the display as seen in Figure 2.
4. Orient the bracket on the back of the monitor as shown in Figure 2.
5. Line up the VESA holes on the bracket with the VESA holes on the back of the monitor. Using the Allen wrench, secure the bracket to the monitor using the four Allen head screws .
 - a. **Note:** Four 10mm and four 14mm screws are included. Refer to the "Items Included in the Box" section to determine which screws to use with your PT model.
6. Slide R50L thin client computer into the bracket from left to right. See Figures 3 and 4.
7. Insert thin client power adapter into the lower right holster.
8. Attach VGA cable, USB cable and power adapter connector to the thin client and monitor.
 - a. **Note:** Connect the adapter to one end of the VGA cable. Then connect the adapter to the DVI-I connector on the R50L thin client. Connect the other end of the VGA cable to the monitor.
 - b. **Note:** This bracket is compatible with the RS-232 serial touchscreen LCD versions.
9. Bundle excess power adapter cabling, VGA cable and USB cable and put into cable clip located to the left of the holster.
10. Mount the thin client bracket/monitor bundle to the customer-specified mounting solution.
11. Follow thin client instructions to set up and operate thin client.