

RS232 User Guide

Planar Simplicity Series 4K Displays



SL4364K SL5064K SL5564K SL6564K SL7564K SL8664K

Copyright © February 2021 by Planar Systems, Inc. All rights reserved.

This document may not be copied in any form without permission from Planar. Information in this document is subject to change without notice.

Trademark Credits

Windows™ is a trademark of Microsoft Corp. All other companies are trademarks or registered trademarks of their respective companies.

Disclaimer

The information contained in this document is subject to change without notice. Planar Systems, Inc. makes no warranty of any kind with regard to this material. While every precaution has been taken in the preparation of this manual, the Company shall not be liable for errors or omissions contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Warranty and Service Plans

Planar warranty and service plans will help you maximize your investment by providing great support, display uptime, and performance optimization. From post-sale technical support, to a full suite of depot services, our services are performed by trained employees. When you purchase a Planar product, you get more than a display; you get the service and support you need to maximize your investment. To find the latest warranty and service information regarding your Planar product, please visit http://www.planar.com/support

RoHS Compliance Statement

The Planar Simplicity Series is fully RoHS compliant.

Part Number: 020-1344-00G

Table of Contents

Intro	oduction		7
1.	Purpose		7
2.	Definitior	ns, Abbreviations and Acronyms	7
Con	nmand Pa	acket Format	8
3.	Physical	Specifications	8
4.	Commun	nication Procedure	9
5.	Comman	nd Format	9
Syst	em		10
6.	Commun	nication Control	10
	6.1 Mes	ssage Report	10
7.	Monitor I	nformation	11
	7.1 Moo	del Number, FW Version, Build Date Message Get	11
	7.2 Moo	del Number, FW Version, Build Date Message Report	11
Gen	eral		12
8.	Power St	tate	12
	8.1 Pov	wer State Get	12
	8.2 Pov	wer State Report	12
	8.3 Pov	wer State Set	12
9.	IR Remo	te Control Lock Functions	13
	9.1 IR F	Remote Lock Status Get	13
	9.2 IR F	Remote Lock Status Report	13
	9.3 IR F	Remote Lock Status Set	14
	9.4 Key	/pad Lock Status Get	14
	9.5 Key	/pad Lock Status Report	14
	9.6 Key	/pad Lock Status Set	15
10.	Power St	tate at Cold Start	16
	10.1	Power State at Cold Start Get	16
	10.2	Power State at Cold Start Report	16
	10.3	Power State at Cold Start Set	17
Inpu	it Source	es	18
11.	Input Sou	urce	18
	11.1	Input Source Set	18
12.	Current S	Source	19

	12.1	Current Source Get	19
	12.2	Current Source Report	19
Vide	eo		20
13.	Video Pa	arameters	20
	13.1	Video Parameters Get	20
	13.2	Video Parameters Report	20
	13.3	Video Parameters Set	21
	13.4	Color Temperature Get	21
	13.5	Color Temperature Report	22
	13.6	Color Temperature Set	22
	13.7	Color Parameters Get	23
	13.8	Color Parameters Report	23
	13.9	Color Parameters Set	24
14.	Zoom M	1ode	25
	14.1	Zoom Mode Get	25
	14.2	Zoom Mode Report	25
	14.3	Zoom Mode Set	26
Aud	lio		27
15.	Volume		27
	15.1	Volume Get	27
	15.2	Volume Report	27
	15.3	Volume Set	28
16.	Volume	Limits	29
	16.1	Volume Limits Get	29
	16.2	Volume Limits Report	29
	16.3	Volume Limits Set	30
17.	Audio Pa	arameters	31
	17.1	Audio Parameters Get	31
	17.2	Audio Parameters Report	31
	17.3	Audio Parameters Set	31
Mis	cellaneo	ous	32
18.	Operatir	ng Hours	32
	18.1	Miscellaneous Info Get	32
	18.2	Miscellaneous Info Report	32
19.	Auto Ad	ljust	33
	19.1	Auto Adjust Set	33
20.	Serial C	code	34

//

Table of Contents

Command Summary						
20.2	Serial Code Report	34				
20.1	Serial Code Get	34				

Introduction

1. Purpose

The purpose of this document is to explain in detail the commands and steps that can be used to control a Planar Simplicity Series 4K display via RS232C.



2. Definitions, Abbreviations and Acronyms

- ACK Acknowledge
- NAK Not Acknowledge
- NAV Not Available
- ID Identification

Command Packet Format

Note: The cable included in the accessory kit is a 2.5mm (TRRS, male) to DB-9 (female) adaptor.

3. Physical Specifications

- 1. Baud Rate : 9600
- 2. Data bits: 8
- 3. Parity : None
- 4. Stop Bit : 1
- 5. Flow Control : None
- 6. The Pin Assignments for DB9 male connector:

Male D-Sub 9-Pin (outside view)



Pin#	Signal	Remark
1	NC	
2	RXD	Input to LCD Monitor = 1st Ring on 2.5mm
3	TXD	Output from LCD Monitor = Tip on 2.5mm
4	NC	
5	GND	Sleeve on 2.5mm
6	NC	
7	NC	

Note: Use a crossover cable (null modem) for connection to the host controller:



Planar Simplicity Series 4K displays use RXD, TXD and GND pins for RS232C control. For RS232C cable, use the reverse type cable.

4. Communication Procedure

Send control commands from a host controller via the RS232 connection. Do not send a new command until the previous command is acknowledged. However, if a response is not received within 500 milliseconds, a retry may be triggered. Every valid command receives an ACK. A command that is valid, but not supported in the current implementation, will be responded to with NAV (Not Available). If the command buffer is corrupt, (transmission errors) the command will be responded to with NAK. The display operates according to the received command. If the command is a valid "Get" command, the display responds with the requested info. If the command allowed, the display performs the requested operation.

Note: For LAN control, the port number is 5000. To enable LAN support in standby mode, the Power Save Mode setting must not be set to Low Power. Reference the *Simplicity Series 4K Displays User Guide* for more information.

5. Command Format

The RS232 packet format:

Control C3

In Detail:

Number of Field	Name of Field	Description
Byte 1	Header	Header = 0xA6
Byte 2	Monitor ID	Monitor ID Range: 1 ~ 255 Signal Mode: Display Address range from 1 to 255 Broadcast Mode: Display Address is 0, so no ACK or Report is expected
Byte 3	Category	0x00
Byte 4	Code0 (Page)	0x00
Byte 5	Code1 (Function)	0x00
Byte 6	Length	Length has to be calculated in the following way: Length = N + 3
Byte 7	Data Control	Data Control = 0x01 (fixed)
Byte 8 ~ Byte 44	Data[0] ~ Data[N]	This field can be also empty. If not empty then the range of Data Size, $N = 0$ to 36.
Last Byte	Checksum	Checksum Range = 0 to 255 (0xFF). Algorithm: The EXCLUSIVE-OR (XOR) of all bytes in the message except the checksum itself. Checksum = [Header] XOR [Monitor ID] XOR DATA[0] XOR DATA[N]



6. Communication Control

This defines the feedback command from the monitor to the host controller. When the device receives a display command from the host controller the command reported to host controller will be ACK, NAK or NAV.

Note: There is no reply message when the wrong ID address is used.

6.1 Message Report

Number of Field	Name of Field	Description
Byte 1	Header	Header = $0x21$
Byte 2	Monitor ID	Monitor ID Range: 1 ~ 255
Byte3	Category	0x00
Byte4	Page	0x00
Byte5	MsgLen	Length of message plus Checksum code. Calculate the length from Control Byte to Checksum Byte.
Byte6	Control	0x01
Byte7	Data[0]	Copy the received Command code
Byte8~Byte8+(N-1)	Data[1]~Data[N]	Returned data associated with command code
Byte 8+N	Checksum	XOR of all byte in reply/report packet (except checksum itself)

Example ACK Reply: (Display Address 01)

Header	Monitor ID	Category	Page	Length	Control	Data[0]	Data[1]	Checksum	Description
0x21	0x01	0x00	0x00	0x04	0x01	0x00	0x00	0x25	Command is well executed.

Example NAK Reply: (Display Address 01)

Header	Monitor ID	Category	Page	Length	Control	Data[0]	Data[1]	Checksum	Description
0x21	0x01	0x00	0x00	0x04	0x01	0x00	0x03	0x26	If the command code is Data(0), the system will reply "NAK."

Example NAV Reply: (Display Address 01)

Header	Monitor ID	Category	Page	Length	Control	Data[0]	Data[1]	Checksum	Description
0x21	0x01	0x00	0x00	0x04	0x01	0x00	0x04	0x21	Checksum error- "NAV". Command Code Data(1)-"NAV".

7. Monitor Information

This command provides the SICP protocol and the display software versions to the host controller.

7.1 Model Number, FW Version, Build Date Message Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA1 = Model Number & FW version of device with Date- Get		Request the Model Number and FW version of the device
DATA[1] to DATA[N]	Codes to request		0x00 = Model Number 0x01 = FW version 0x02 = Build Date

Example: Get model number (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x04	0x01	0xA1	0x00	0x03

7.2 Model Number, FW Version, Build Date Message Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA1 = Model Number & FW version of device with Date- Report		Request the Model number, FW version, FW build date
DATA[1] to DATA[N]	Character[0] to Character[N-1]		36 (0x24) characters maximum. No. of characters, $N = 1$ to 36 (0x24). The actual size determines the value of the message size byte.

General

8. Power State

Use this command to get/set the power state as defined below.

8.1 Power State Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x19 = Power State - Get		Command requests the display to report its current power state

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x03	0x01	0x19	0xBC

8.2 Power State Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x19 = Power State - Report		Command reports power state
DATA[1]	Power State		0x01 = Power Off 0x02 = On

Example: Power State On (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Checksum
0x21	0x01	0x00	0x00	0x04	0x01	0x19	0x02	0x3E

8.3 Power State Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x18 = Power State - Set		Command to change the Power State of the display
DATA[1]	Power State		0x01 = Power Off 0x02 = On

Example: Power State Deep Sleep (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x04	0x01	0x18	0x01	0xBB

9. IR Remote Control Lock Functions

Use the following commands separately to lock or unlock the Remote Control and Keypad.

9.1 IR Remote Lock Status Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1D = IR Remote Control Lock Status- Get		Get unlock all /lock all /lock all but power/lock all but volume/ primary/secondary status

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x03	0x01	0x1D	0xB8

9.2 IR Remote Lock Status Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1D = IR Remote Control Lock Status- Report		Report unlock all /lock all /lock all but power/lock all but volume/ primary/secondary status
DATA[1]	Status indicator byte for Remote Control		0x01 = Unlock All 0x02 = Lock All 0x03 = Lock All but Power 0x04 = Lock All but Volume 0x05 = Primary (Master) 0x06 = Secondary (daisy chain PD) 0x07 = Lock All except Power & Volume

Example: Lock Keyboard and unlocked Remote Control (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Checksum
0x21	0x01	0x00	0x00	0x04	0x01	0x1D	0x01	0x39

9.3 IR Remote Lock Status Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1C = IR Remote Control Lock Status- Set		Set unlock all/lock all /lock all but power/lock all but volume/ Primary/Secondary status
DATA[1]	Status indicator byte for Remote Control		0x01 = Unlock All 0x02 = Lock All 0x03 = Lock All but Power 0x04 = Lock All but Volume 0x05 = Primary (Master) 0x06 = Secondary (Daisy chain PD) 0x07 = Lock All except Power & Volume

Example: Unlock local remote control (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x04	0x01	0x1C	0x01	0xBF

9.4 Keypad Lock Status Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1B = Keypad Lock Status- Get		Set unlock all/lock all /lock all but power/lock all but volume/ Primary/Secondary status

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x03	0x01	0x1B	0xBE

9.5 Keypad Lock Status Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1B = Keypad Lock Status- Report		Report unlock all /lock all/lock all but power/ lock all but Volume
DATA[1]	Status Indicator Byte for Keypad		0x01 = Unlock All 0x02 = Lock All 0x03 = Lock All but Power 0x04 = Lock All but Volume 0x07 = Lock All except Power & Volume

Example: Reporting status of Keypad indicating Lock All (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Checksum
0x21	0x01	0x00	0x00	0x04	0x01	0x1B	0x02	0x3C

9.6 Keypad Lock Status Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1A = Keypad Lock Status- Set		Report unlock all /lock all/lock all but power/ lock all but Volume
DATA[1]	Status Indicator Byte for Keypad		0x01 = Unlock All 0x02 = Lock All 0x03 = Lock All but Power 0x04 = Lock All but Volume 0x07 = Lock All except Power & Volume

Example: Set Lock All on Keypad (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x04	0x01	0x1A	0x01	0xB9

//

10. Power State at Cold Start

Use this command is to set, update, and store the cold start power state.

10.1 Power State at Cold Start Get

Bytes	Bytes Description	Bits	Description
	0xA4 = Power State at Cold		Get Power State at Cold Start
DATA[0]	Start - Get		State

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x03	0x01	0xA4	0x01

10.2 Power State at Cold Start Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA4 = Power State at Cold Start- Report		Report from Power state at Cold Start state
DATA[1]	Power State at Cold Start		0x00 = Power Off 0x01 = Forced On 0x02 = Last Status

Example: Report status of Forced On for Power State at Cold Start (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Checksum
0x21	0x01	0x00	0x00	0x04	0x01	0xA4	0x01	0x80

10.3 Power State at Cold Start Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA3 = Power State at Cold Start- Set		Set Power State at Cold Start
DATA[1]	Power State at Cold Start		0x00 = Power Off 0x01 = Forced On 0x02 = Last Status

The value is stored and applied only when the display starts up from cold start power state the next time:

- Power Off: The monitor will automatically switch to Power Off mode (even if the last status was on) whenever the main power turns on, or resumes after a power interruption.
- Forced On: The monitor will automatically switch to Power On mode whenever the main power turns on or resumes after a power interruption.
- Last Status: The monitor will be automatically switch to the last status (either Power Off or On) whenever the main power turns on or resumes after a power interruption.

Example: Report status of Forced On for Power State at Cold Start (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Checksum
0x21	0x01	0x00	0x00	0x04	0x01	0xA4	0x01	0x80

Input Sources

11. Input Source

Use this command to change the current input source.

11.1 Input Source Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0xAC = Input Source- Set		Command requests the display to set the
DATA[1]	Input Source Type		Cullent input source $0x05 = VGA$ $0x06 = HDMI 2$ $0x0A = DisplayPort$ $0x0B = OPS$ $0x0D = HDMI 1$ $0x0E = DVI-D$ $0x0F = HDMI 3$ $0x10 = BROWSER$ $0x11 = CMS$ $0x16 = Media Player$ $0x17 = PDF Player$ $0x18 = Custom$ $0x19 = HDMI 4$
DATA[2]	Reserved		(Reserved, value is 0)
DATA[3]	Reserved		(Reserved, value is 0)
DATA[4]	Reserved		(Reserved, value is 0)

Note: Certain sources only apply to specific models

- DisplayPort, HDMI 3, HDMI 4: 65/75/86 Only
- DVI-D: 43/55 Only

Example: Set on DVI-D (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Data[2]	Data[3]	Data[4]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x07	0x01	0xAC	0x0E	0x00	0x00	0x00	0x03

12. Current Source

12.1 Current Source Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xAD = Current Source-		Command requests the display to report
	Get		the current input source in use.

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x03	0x01	0xAD	0x08

12.2 Current Source Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xAD = Current Source- Report		Command reports to the host controller the current input source used the display.
DATA[1]	Input Source Type/Number		0x05 = VGA 0x06 = HDMI 2 0x0A = DisplayPort 0x0B = OPS 0x0D = HDMI 1 0x0E = DVI-D 0x0F = HDMI 3 0x10 = BROWSER 0x11 = CMS 0x16 = Media Player 0x17 = PDF Player 0x18 = Custom 0x19 = HDMI 4
DATA[2]	Reserved		(Reserved, value is 0)
DATA[3]	Reserved		(Reserved, value is 1)
DATA[4]	Reserved		(Reserved, value is 0)

Example: Current Input Source: DVI-D (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Data[2]	Data[3]	Data[4]	Checksum
0x21	0x01	0x00	0x00	0x07	0x01	0xAD	0x0E	0x00	0x01	0x00	0x84



13. Video Parameters

Use the following commands to get/set video parameters as defined below.

13.1 Video Parameters Get

Bytes	Bytes Description	Bits	Description
	0x33 = Video Parameters-		Command requests the display to report its
DATA[0]	Get		current video parameters.

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x03	0x01	0x33	0x96

13.2 Video Parameters Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x33 = Video Parameters- Report		Command reports to the host controller the current video parameters of the display.
DATA[1]	Brightness		0 to 100 (%) of the user selectable range of the display
DATA[2]	Color		0 to 100 (%) of the user selectable range of the display
DATA[3]	Contrast		0 to 100 (%) of the user selectable range of the display
DATA[4]	Sharpness		0 to 100 (%) of the user selectable range of the display
DATA[5]	Tint (Hue)		0 to 100 (%) of the user selectable range of the display
DATA[6]	Black Level		0 to 100 (%) of the user selectable range of the display
DATA[7]	Gamma Selection		0x01 = Native, $0x02$ = S gamma, $0x03$ = 2.2, 0x04 = 2.4 0x05 = D-image(DICOM gamma)

Example: Video parameters are set to 55 % (0x37) and Gamma Curve is set to 2.2 (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Data[2]	Data[3]	Data[4]	Data[5]	Data[6]	Data[7]	Checksum
0x21	0x01	0x00	0x00	0x0A	0x01	0x33	0x37	0x37	0x37	0x37	0x37	0x37	0x03	0x1B

13.3 Video Parameters Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x32 = Video Parameters- Set		Command to change the current video parameters
DATA[1]	Brightness		0 to 100 (%) of the user selectable range of the display
DATA[2]	Color		0 to 100 (%) of the user selectable range of the display
DATA[3]	Contrast		0 to 100 (%) of the user selectable range of the display
DATA[4]	Sharpness		0 to 100 (%) of the user selectable range of the display
DATA[5]	Tint (Hue)		0 to 100 (%) of the user selectable range of the display
DATA[6]	Black Level		0 to 100 (%) of the user selectable range of the display
DATA[7]	Gamma Selection		0x01 = Native, $0x02$ = S gamma, $0x03$ = 2.2, 0x04 = 2.4, 0x05 = D-image(DICOM gamma)

Example: Set all video parameters to 0x37 (55 %) (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Data[2]	Data[3]	Data[4]	Data[5]	Data[6]	Data[7]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x0A	0x01	0x32	0x37	0x37	0x37	0x37	0x37	0x37	0x03	0xAC

13.4 Color Temperature Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x35 = Color Temperature- Get		Command requests the display to report its current color temperature.

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x03	0x01	0x35	0x90

13.5 Color Temperature Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x35 = Color Temperature- Report		Command reports to the host controller the current color temperature of the display.
DATA[1]	Color Temperature		0x00 = User 1 0x01 = Native 0x03 = 10000K 0x04 = 9300K 0x05 = 7500K 0x06 = 6500K 0x09 = 5000K 0x0A = 4000K 0x0D = 3000K 0x12 = User 2

Example: Color temperature is set to Nature (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Checksum
0x21	0x01	0x00	0x00	0x04	0x01	0x35	0x01	0x10

13.6 Color Temperature Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x34 = Color Temperature- Set		Command reports to the host controller the current color temperature of the display.
DATA[1]	Color Temperature		0x00 = User 1 0x01 = Native 0x03 = 10000K 0x04 = 9300K 0x05 = 7500K 0x06 = 6500K 0x09 = 5000K 0x0A = 4000K 0x0D = 3000K 0x12 = User 2

Example: The current Color Temperature is set to Nature (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x04	0x01	0x34	0x01	0x97

13.7 Color Parameters Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x37 = Color Parameters- Get		Command requests the current video parameters of the display.

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x03	0x01	0x37	0x92

13.8 Color Parameters Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x37 = Color Parameters- Report		Command reports to the host controller the current video parameters of the display.
DATA[1]	Red Color Gain Value		0 to 255 of the user selectable range of the display
DATA[2]	Green Color Gain Value		0 to 255 of the user selectable range of the display
DATA[3]	Blue Color Gain Value		0 to 255 of the user selectable range of the display
DATA[4]	Red Color Offset Value		0 to 255 of the user selectable range of the display
DATA[5]	Green Color Offset Value		0 to 255 of the user selectable range of the display
DATA[6]	Blue Color Offset Value		0 to 255 of the user selectable range of the display

Example: All Color Parameters are set to 255 (0xFF) (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Data[2]	Data[3]	Data[4]	Data[5]	Data[6]	Checksum
0x21	0x01	0x00	0x00	0x09	0x01	0x37	0xFF	0xFF	0xFF	0xFF	0xFF	0xFF	0x1F

Bytes	Bytes Description	Bits	Description
DATA[0]	0x36 = Color Parameters- Set		Command sets the video parameters of the display.
DATA[1]	Red Color Gain Value		0 to 255 of the user selectable range of the display
DATA[2]	Green Color Gain Value		0 to 255 of the user selectable range of the display
DATA[3]	Blue Color Gain Value		0 to 255 of the user selectable range of the display

Example: All color parameters are set to 255 (0xFF) (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Data[2]	Data[3]	Data[4]	Data[4]	Data[5]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x09	0x01	0x36	0xFF	0xFF	0xFF	0xFF	0xFF	0xFF	0x99

14. Zoom Mode

Use this command to control the display screen format.

14.1 Zoom Mode Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x3B = Zoom Mode-		Command requests the display to report its
	Get		current picture format.

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x03	0x01	0x3B	0x9E

14.2 Zoom Mode Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x3B = Zoom Mode – Report		Command report to the host controller the current picture format of the display.
		Bit 74	Not used
DATA[1]	Zoom Mode	Bit 30	0x00 = 4:3 0x01 = Custom 0x02 = Real 0x03 = Full 0x04 = 21:9

Example: Current Picture Format is Widescreen on Full Display (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Checksum
0x21	0x01	0x00	0x00	0x04	0x01	0x3B	0x03	0x1D

14.3 Zoom Mode Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x3A = Zoom Mode- Set		Command requests the display to set the specified picture format.
		Bit 74	Not used.
DATA[1]	Zoom Mode	Bit 30	0x00 = 4:3 0x01 = Custom 0x02 = 1:1 0x03 = Full 0x04 = 21:9

Example: Set Picture Format to Widescreen on Full Display (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x04	0x01	0x3A	0x03	0x9B



15. Volume

Use this command to set/get the volume as defined below.

15.1 Volume Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x45 = Volume- Get		Command requests the display to report its current Volume level

• To mute the display, send Volume = 0. This command does not overwrite the system mute status of the display.

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x03	0x01	0x45	0xE0

15.2 Volume Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x45 = Volume- Report		Command reports current volume level
DATA[1]	Volume		0 to 100 (%) of the user selectable range of the display
DATA[2]	Audio Out Volume Level		0 to 100 (%) of the user selectable range of the display.

Example: Volume 77% (0x4D) (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Data[2]	Checksum
0x21	0x01	0x00	0x00	0x05	0x01	0x45	0x4D	0x4D	0x61

15.3 Volume Set

This command can set the volume level for speaker and audio out, individually.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x44 = Volume- Set		Command requests the display to set the specified volume parameters.
DATA[1]	Volume		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Audio Out Volume Level		0 to 100 (%) of the user selectable range of the display.

Example: Set the Display Volume to 77% (0x4D) (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Data[2]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x05	0x01	0x44	0x4D	0x4D	0xE7

16. Volume Limits

Use this command to set the volume limit for minimum, maximum and to switch on volume.

16.1 Volume Limits Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xB7 = Volume Limits- Get		Command requests the current volume limits

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x03	0x01	0xB7	0x12

16.2 Volume Limits Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xB8 = Volume Limits- Report		The 3 values must conform to the rule: Min <= Switch On <= Max
DATA[1]	Minimum Volume		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Maximum Volume		0 to 100 (%) of the user selectable range of the display.
DATA[3]	Power On Volume		0 to 100 (%) of the user selectable range of the display

Example: Set the Display to the following: 10% (0x0A), 77% (0x4D), 50% (0x32) (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Data[2]	Data[3]	Checksum
0x21	0x01	0x00	0x00	0x06	0x01	0xB7	0x0A	0x4D	0x32	0xE5

16.3 Volume Limits Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0xB8 = Volume Limits- Set		The 3 values must conform to the rule: Min <= Switch On <= Max
DATA[1]	Minimum Volume		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Maximum Volume		0 to 100 (%) of the user selectable range of the display.
DATA[3]	Power On Volume*		0 to 100 (%) of the user selectable range of the display

Note: To disable or reset the Power On Volume, set this value to the display default value of 0x14 (20%).

Example: Set the Display to the following: 10% (0x0A), 77% (0x4D), 50% (0x32) (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Data[2]	Data[3]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x06	0x01	0xB8	0x0A	0x4D	0x32	0x6D

17. Audio Parameters

Use this command to set/get the audio parameters as defined below.

17.1 Audio Parameters Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x43 = Audio Parameters- Get		Command requests the display to report its current audio parameters

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x03	0x01	0x43	0xE6

17.2 Audio Parameters Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x43 = Audio Parameters- Report		Command reports Audio Parameters
DATA[1]	Treble		0 to 100 (%) of the user selectable range of the display
DATA[2]	Bass		0 to 100 (%) of the user selectable range of the display

Example: Current Display Settings: Treble 80% (0x50), Bass 93% (0x5D) (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Data[2]	Checksum
0x21	0x01	0x00	0x00	0x05	0x01	0x43	0x50	0x50	0x67

17.3 Audio Parameters Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x42 = Audio Parameters- Set		Command to change the Audio Parameters of the display.
DATA[1]	Treble		0 to 100 (%) of the user selectable range of the display
DATA[2]	Bass		0 to 100 (%) of the user selectable range of the display

The interface software must be set to modify the variables outlined by the parameters above.

Example: Set the Display: Treble 77% (0x4D), Bass77% (0x4D) (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Data[2]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x05	0x01	0x42	0x4D	0x4D	0xE1

Miscellaneous

18. Operating Hours

Use this command to record the working hours of the display.

18.1 Miscellaneous Info Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x0F = Misc. Info - Get		Command requests the display to report from miscellaneous information parameters
DATA[1]	Item		0x02 = Operating Hours (All other values are reserved)

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x04	0x01	0x0F	0x02	0xAF

18.2 Miscellaneous Info Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x0F = Misc. Info- Report		Command reports current Operating Hours
DATA[1] to DATA[2]	Operating Hours		DATA[1] forms MSByte DATA[2] forms LSByte 16-bit-wide operational hours value

Example: Current Display Operation Hours Counter Value (Display Address 01)

Header	Monitor ID	Category	Page	Length	Data Control	Data[0]	Data[1]	Data[2]	Checksum
0x21	0x01	0x00	0x00	0x05	0x01	0x0F	0x4D	0x00	0x66

19. Auto Adjust

This command works for VGA (host controller) video auto adjust.

19.1 Auto Adjust Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x70 = Auto Adjust- Set		Command requests the display to make auto adjustment on VGA input source.
DATA[1]	Item		0x40 = Auto Adjust (*All other values are reserved *)
DATA[2]			(Reserved, Default 0)

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Data[1]	Data[2]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x05	0x01	0x70	0x40	0x00	0x93

20. Serial Code

20.1 Serial Code Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x15 = Serial Code- Get		Command requests the display to report its Serial Code Number (Production code) 14 digits

Example: (Display Address 01)

Header	Monitor ID	Category	Code0	Code1	Length	Data Control	Data[0]	Checksum
0xA6	0x01	0x00	0x00	0x00	0x03	0x01	0x15	0xB0

20.2 Serial Code Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x15 = Serial Code – Report		Command reports Serial Code
DATA[1]	1 st Character		Character acc. ASCII character map (HEX)
DATA[2]	2 nd Character		
DATA[3]	3 rd Character		
DATA[14]	14 th Character		Character acc. ASCII character map (HEX)

//

Command Summary

Command Name	Set Command	Get Command	Command Code	Remarks
Monitor Information		\checkmark	0xA1	
Power State Get		\checkmark	0x19	
Power State Set			0x18	
Keypad Lock Status Get			0x1B	
Keypad Lock Status Set			0x1A	
IR Remote Lock Status Get			0x1D	
IR Remote Lock Status Set	\checkmark		0x1C	
Power State at Cold Start Get		\checkmark	0xA4	
Power State at Cold Start Set	\checkmark		0xA3	
Current Source Get			0xAC	
Input Source Set	\checkmark		0xAD	
Auto Signal Detecting Get		\checkmark	0xAF	
Auto Signal Detecting Set	\checkmark		0xAE	
Video Parameters Get		\checkmark	0x33	Brightness, etc.
Video Parameters Set	\checkmark		0x32	Brightness, etc.
Color Temperature Get		\checkmark	0x35	
Color Temperature Set	\checkmark		0x34	
Color Parameters Get		\checkmark	0x37	
Color Parameters Set	\checkmark		0x36	
Zoom Mode Get			0x3B	
Zoom Mode Set	\checkmark		0x3A	
Volume Get		\checkmark	0x45	
Volume Set	\checkmark		0x44	
Volume Limits Get		\checkmark	0xB7	
Volume Limits Set	\checkmark		0xB8	
Audio Parameters Get		\checkmark	0x43	
Audio Parameters Set	\checkmark		0x42	
Miscellaneous Info			0x0F	Operating hours
Auto Adjust			0x70	VGA only
Serial Code Get			0x15	